



Remove blow out  
plug and dry fire  
twice each morning  
before operation.